

# DOOR CHIME WITH WIRELESS REMOTE WHITE

 
Product Code: 140102

UPC Code: 020861401020




- No.(3),three working modes: sound+light together,light only,sound only
- No.(4),volume button,to adjust the volume
- No.(5),melody button,to select your favorite melody
- No.(6),code-matching button,to match receiver and transmitter


## Names for Parts

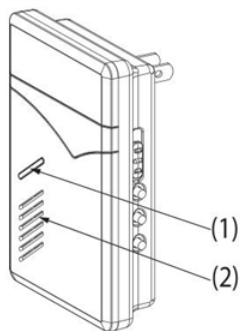


Receiver front side

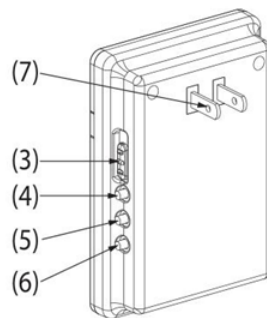

Receiver back side

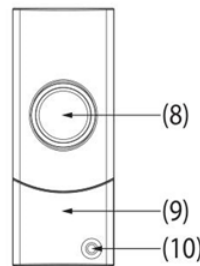 

Transmitter front cover outside

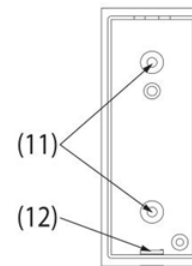 

Transmitter back cover inside

- |                                   |                               |                            |
|-----------------------------------|-------------------------------|----------------------------|
| (1) LED Indicator                 | (2) Speaker                   | (3) Sound-and-Flash Switch |
| (4) Volume Button                 | (5) Melody Selector           | (6) Code Button            |
| (7) Plug                          | (8) Push Button               | (9) Nameplate Cover        |
| (10) Silica gel stopper and screw | (11) Standby holes for screws | (12) Interface             |



## **WIRELESS DOOR CHIME CARILLON DE PORTE SANS FIL**

**WITH PLUG-IN RECEIVER | RÉCEPTEUR BRANCHABLE**

**Auto-learning code doorbell code-matching instruction:**

Keep the code-matching button on the receiver pushed, and push the button of the transmitter at the same time .  
Release the code-matching button on the receiver as soon as the bell rings ,and the release the button of the transmitter accordingly.  
In this case ,the code matching of the doorbell set is finished.

**Code d'auto-apprentissage sonnette instruction de code correspondant:**

Maintenez le bouton de code correspondant sur le récepteur enfoncé et appuyez sur le bouton de l'émetteur en même temps.  
Relâchez le bouton de code correspondant sur le récepteur dès que la cloche sonne, et le bouton de l'émetteur en conséquence libération.  
Dans ce cas, le code correspondant de l'ensemble de sonnette est terminée.